

New Model Showerdrains

Installation-instruction

Box Contents:

- Shower Drain
- Waterproof connection
- Set adjustable parts

1

Necessary materials:

- Sandpaper
- Spirit level
- Tape
- Degreasing agent
- Silicone sealant



2

Roughten the flange:

- We recommend to use the sandpaper to roughen the surface of the side and bottom sections of the drain, then degreasing agent to achieve better adhesion to the floor.



3

Substance removes:


- Make sure that no impurities (motar , etc) can get into drain during the assembly and installation work.



4

Degreasing:

- To degrease the fringe around(for example: use acetone) after the substance has been removed.

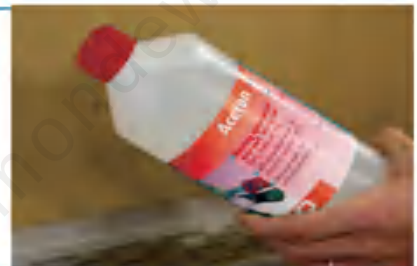

5

Extrude adhesive on fringe

- Put adhesive on the fringe all around of the drain.
Note: the adhesive applying must be consecutive, no lacks to avoid water infiltration possible.



6

Paste waterproof on fringe:

- Put the waterproof on the fringe smoothly. Make sure they stick together closely.
- Push the waterproof well and check if there lacking adhesive.
- Keep the waterproof unmoved until the adhesive solidified (minimum 24 hours, keep the space warm if possible), so that the waterproof and drain cannot be separate.



7

Extrude adhesive on Floor tile / Waterproof:

- If the waterproof stick on drain fringes steady, then extrude adhesive on waterproof again, consecutive and all over.



8

Paste floor tile on waterproof:


- For the purpose to paste floor tile on the waterproof which full of adhesive already, push the floor tile on.
- Take care that there no discontinuances / stops of adhesive. Push them together well.
- Keep the floor tile unmoved until the adhesive solidified (minimum 24 hours, keep the space warm if possible), so that the floor tile and waterproof cannot be separate.



9

Landing edge

- Make the edge to edge closely and joint them together smoothly

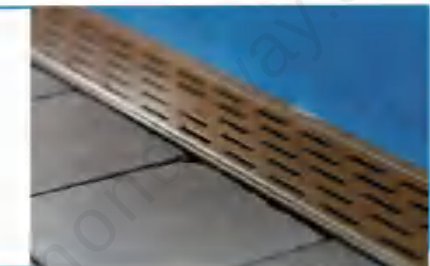

10

Joint between Drain and Floor tile

- Fill the joint between the floor tile and the edge of drain with adhesive, filling-in and smoothing. Brush and make the joint nicely.
- Fill up the adhesive to the joint between floor tiles and make the joint nicely.

