

# SF090-S Instruction

## Accessories List

Please check the number of accessories carefully before installation and check that they are in good condition.



1

Thread seal tape



2

Water inlet joint



3

4x35 Screw



X1

4

M4 Wall anchor



5

Hexagon wrench



6

Mixer



7

Screw M5x6



8

Spout



9

levelling instrument



10

Hand shower



11

Hose



X2

12

Rubber gasket



13

Plug



14

Main body



X2

15

Screw M5x5



16

Soap box




X2


17

3M tape

# Installation Procedure

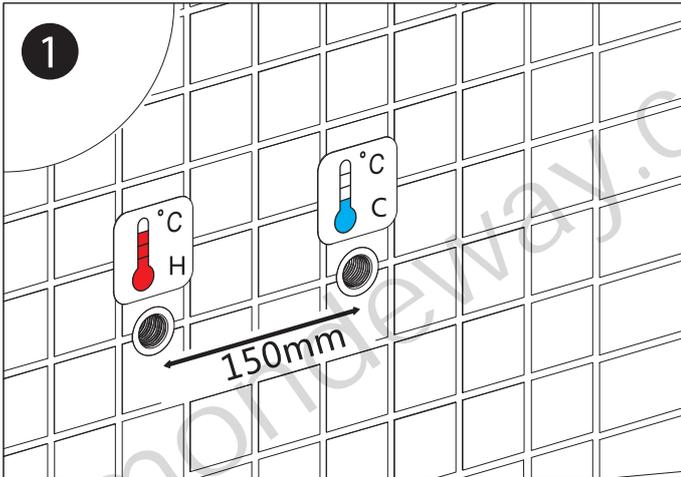


The centre distance of the water pipes is 150mm. The G1/2 outlets are on a parallel line.

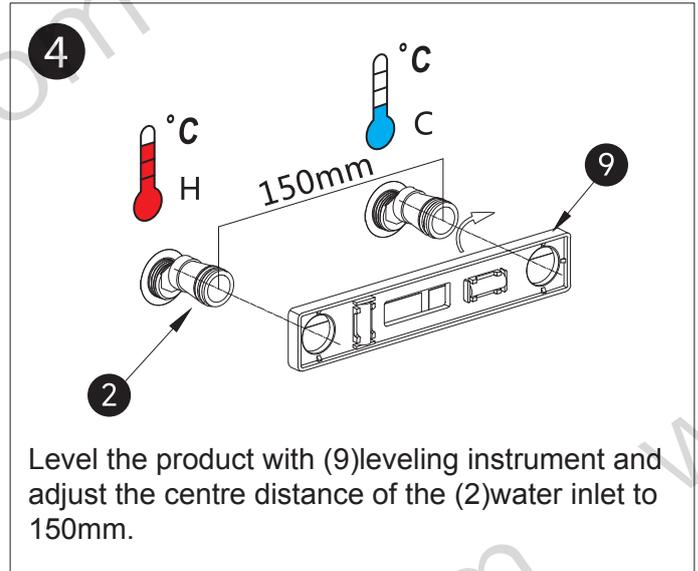


Level the product with (9) leveling instrument and adjust the centre distance of the (2) water inlet to 150mm.




Remove foreign bodies from pipes before installing products. The installation of pipes must follow: hot on the left and cold on the right.

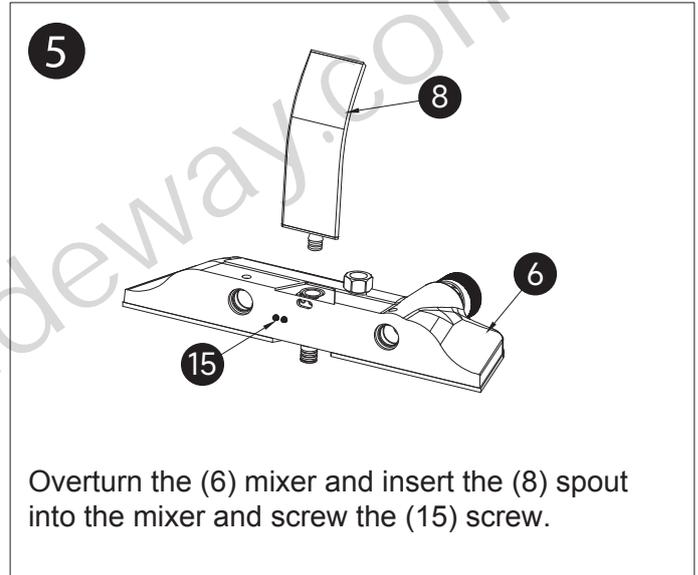

Overturn the (6) mixer and insert the (8) spout into the mixer and screw the (15) screw.

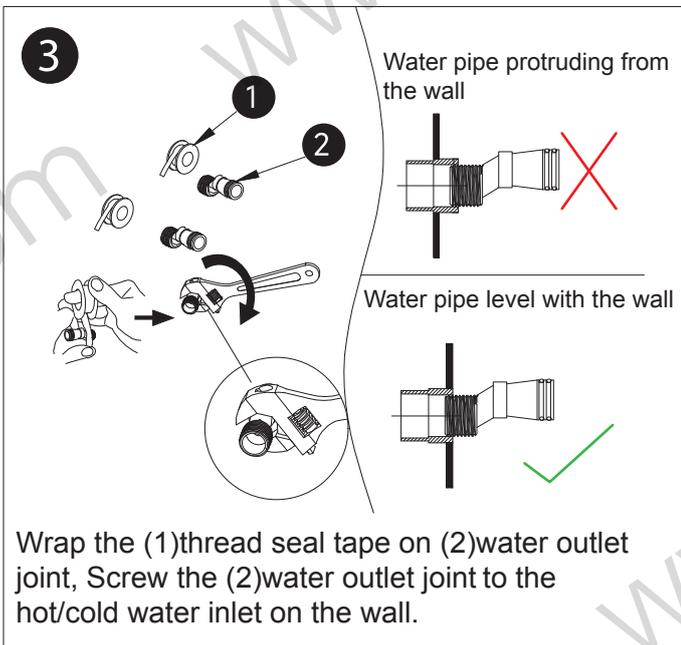


Wrap the (1) thread seal tape on (2) water outlet joint, Screw the (2) water outlet joint to the hot/cold water inlet on the wall.

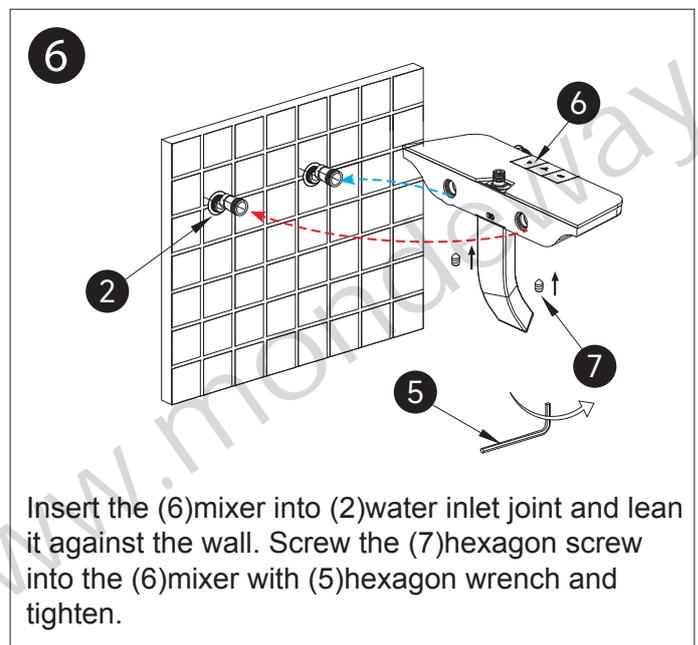

Insert the (6) mixer into (2) water inlet joint and lean it against the wall. Screw the (7) hexagon screw into the (6) mixer with (5) hexagon wrench and tighten.


# Installation Procedure

7

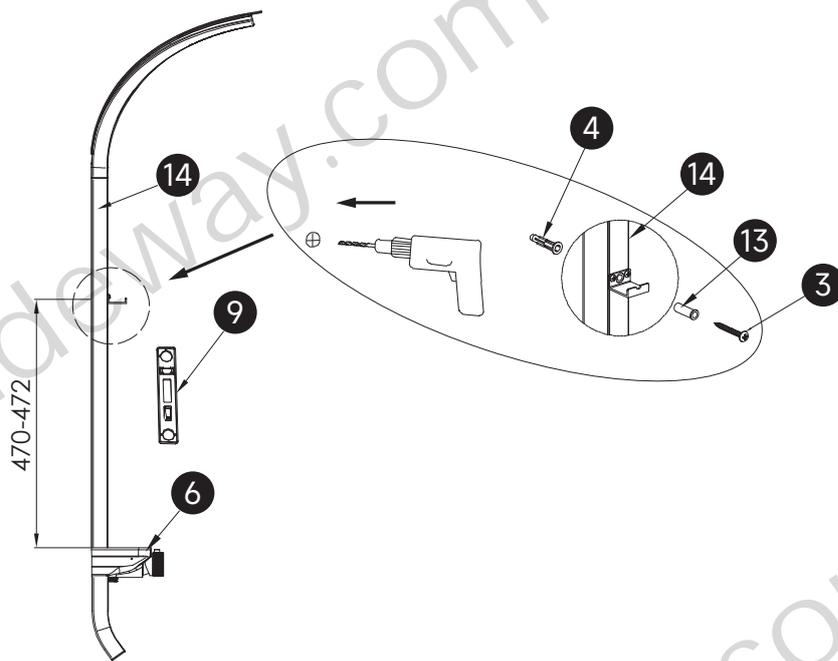


Insert the (14) main body into the (6) mixer, level the (14) main body with (9) leveling instrument, and mark the hole position on middle of the 470-472, then remove the (14) main body and drill a  $\text{Ø}6\text{mm}$  hole in the mark and insert (4) wall anchor into the hole, then insert (14) main body onto (6) faucet then place (13) plug onto (14) main body, place (3) screw into (13) plug and screw into (4) wall anchor.

8

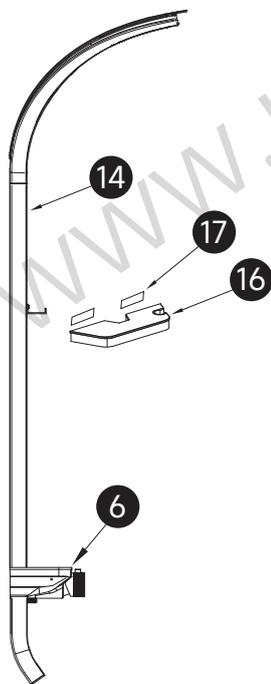

Attach the two (17) 3M tapes to the back of the (16) soap box and insert the (16) soap box into the (14) main body soap box bracket.

9

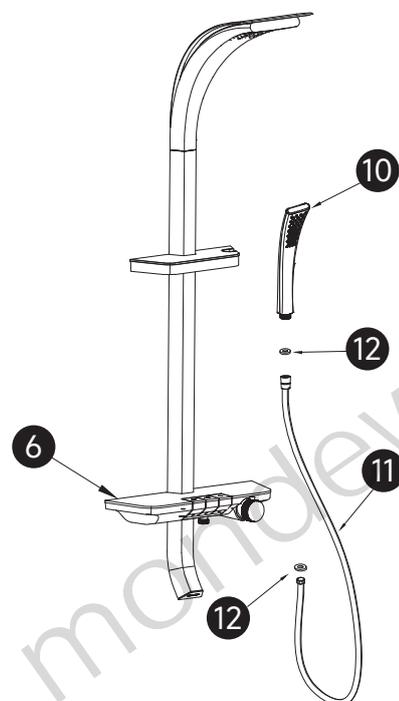

Place (12) rubber gasket into two (11) hose ends and screw one end to joint of the (6) mixer bottom. Screw the other hose end to (10) hand shower.