
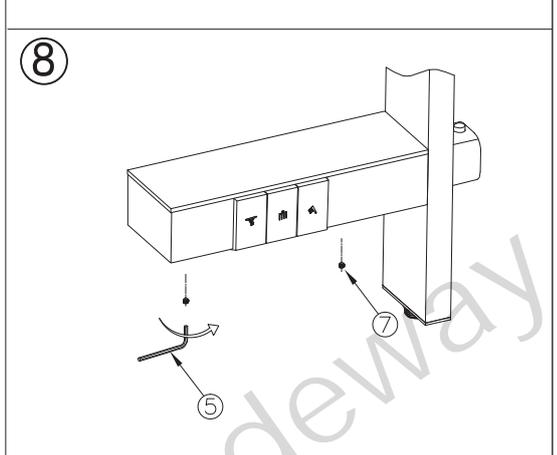
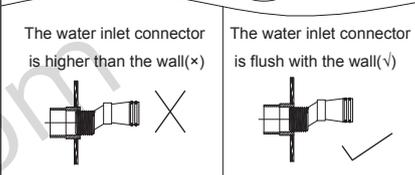
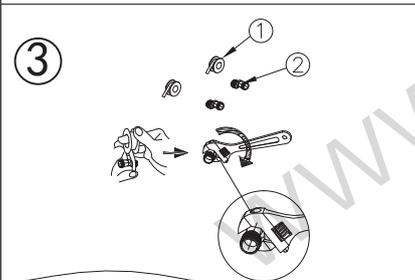
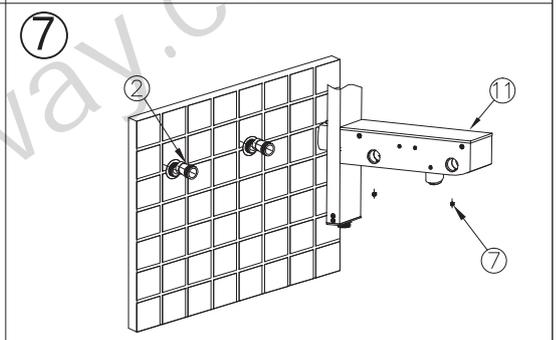
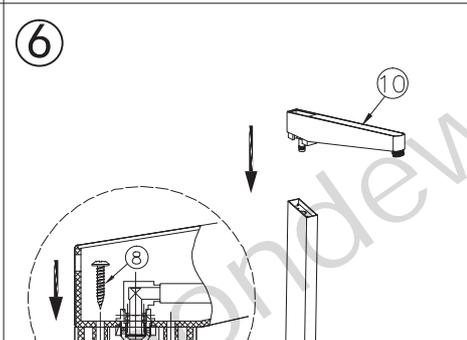
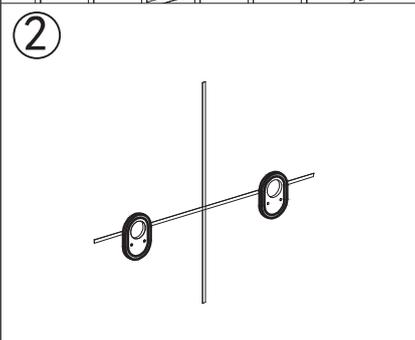
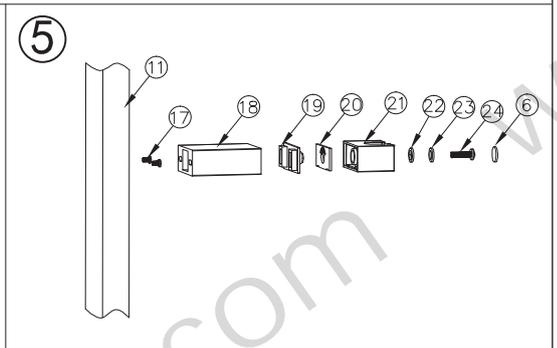
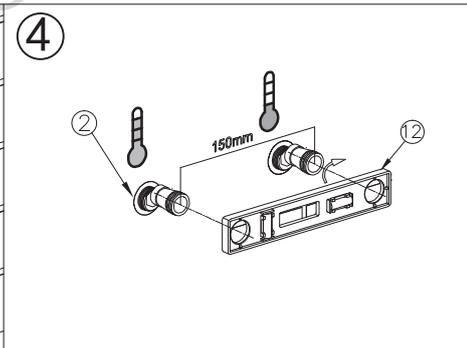
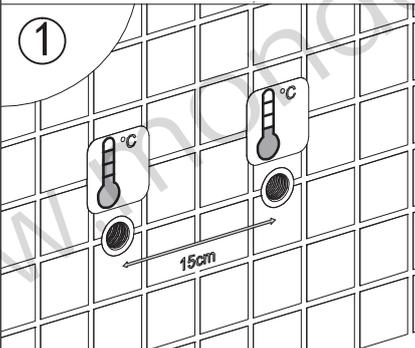



SF1080-S Installation

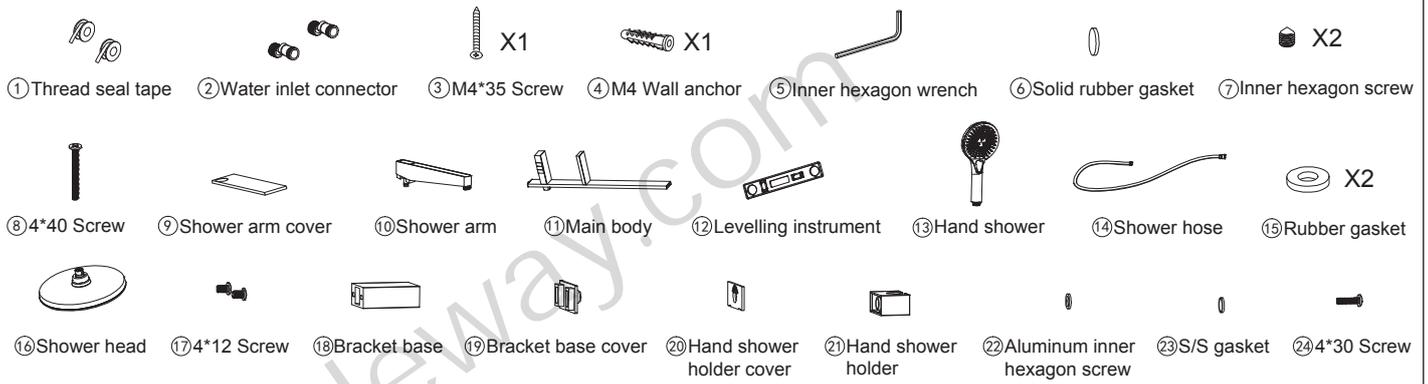


1. Make sure the distance between the centers of the water pipes is 150mm, and the two holes are on a parallel line.
2. Before installing the product, remove the debris in the water pipe, the installation of the water inlet pipe must be strictly based on left hot
3. Wrap the thread seal tape (1) on water inlet connector (2), Screw the water inlet connector (2) to the hot/cold
4. Make sure the product is level by levelling instrument (12) and the distance between the centers of the water inlet connector (2) is 150mm
5. Fix the bracket base (18) to the main body (11) with the screws (17), and then tighten and fix the accessories with the screws (24) according to the figure in the picture.
6. Insert the shower arm (10) to main body (11), and fix them by screws (8)
7. Insert the main body (11) to water inlet connector (2)
8. Insert the inner hexagon screw (7) into main body (11) and fix them by inner hexagon wrench (5)

- ① Thread seal tape ② Water inlet connector ③ M4*35 Screw ④ M4 Wall anchor ⑤ Inner hexagon wrench ⑥ Solid rubber gasket ⑦ Inner hexagon screw
 ⑧ 4*40 Screw ⑨ Shower arm cover ⑩ Shower arm ⑪ Main body ⑫ Levelling instrument ⑬ Hand shower ⑭ Shower hose ⑮ Rubber gasket ⑯ X2
 ⑰ Shower head ⑱ 4*12 Screw ⑲ Bracket base ⑳ Bracket base cover ㉑ Hand shower holder cover ㉒ Hand shower holder ㉓ Aluminum inner hexagon screw ㉔ S/S gasket ㉕ 4*30 Screw ㉖ X2


9

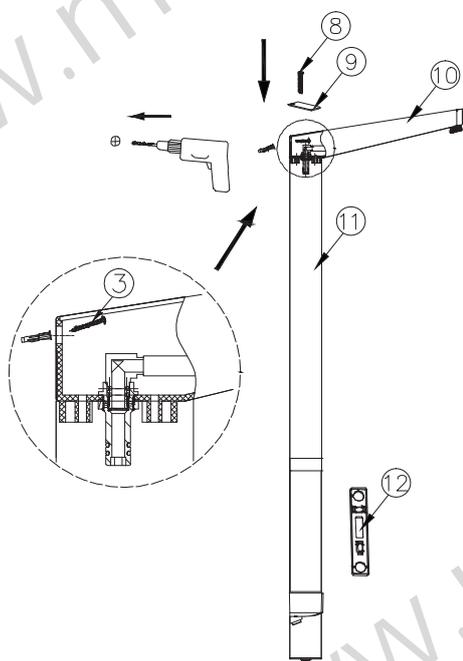

10

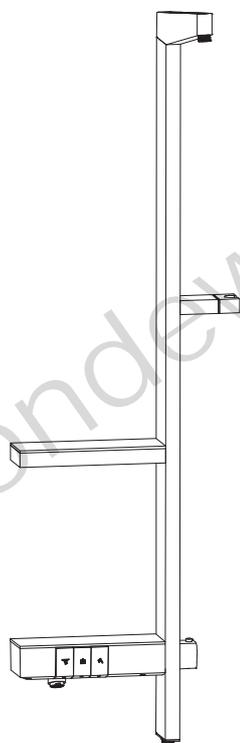

11

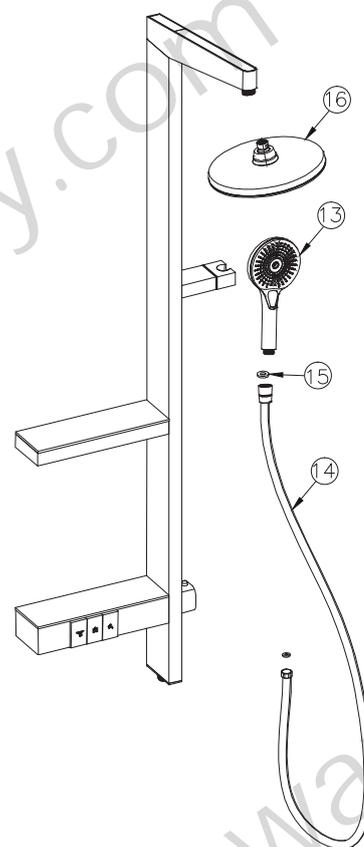

9. Make sure the product is straight by levelling instrument(12), mark at the U groove of shower arm(10) on the wall, then take out the shower arm(10) and main body(11) after marking, drill a hole and insert wall anchor(4), finally insert the shower arm(10) into the main body(11). Insert screws(3) into the U-groove of shower arm(10). Put on the shower arm cover(9) and fix it with screw(8)

10. The effect after installation is shown in the figure

11. Rotate the shower head(16) to shower arm(10), put rubber gasket(15) into each nut of shower hose(14), rotate it to mixer and hand shower(13)