

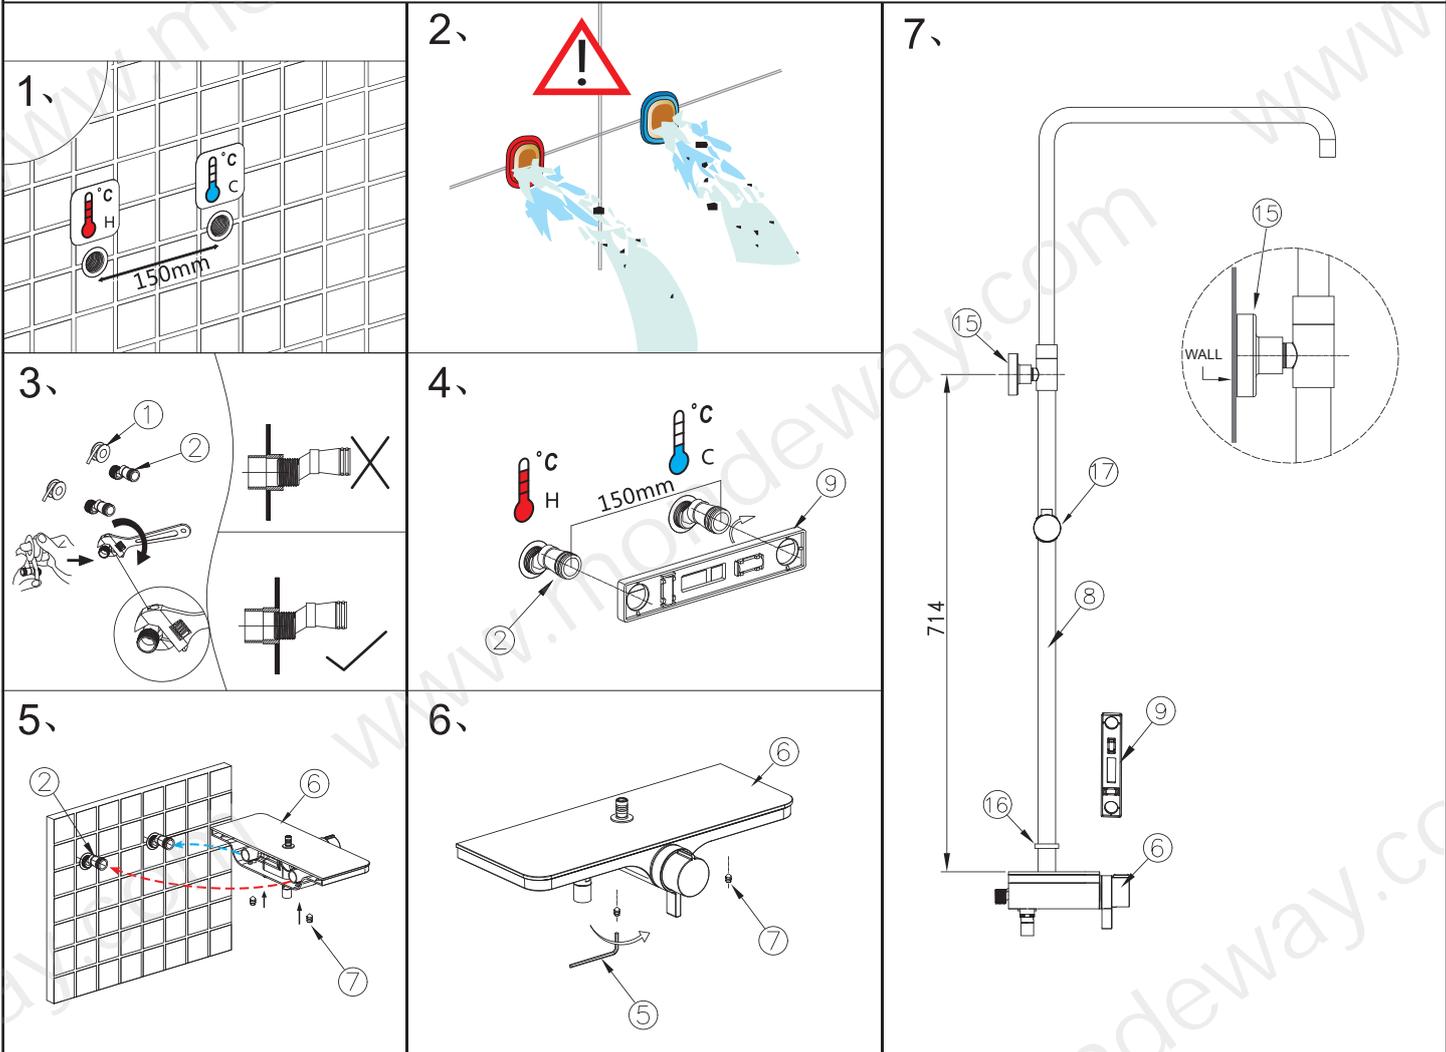
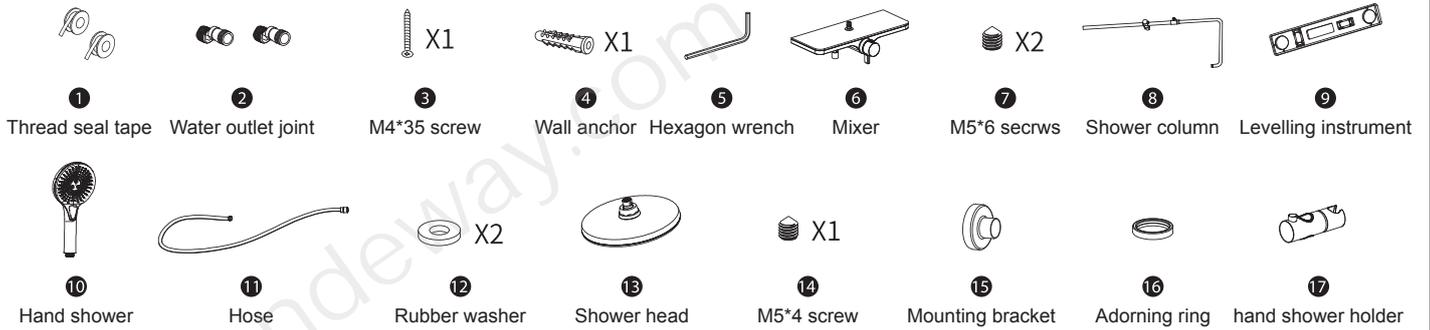
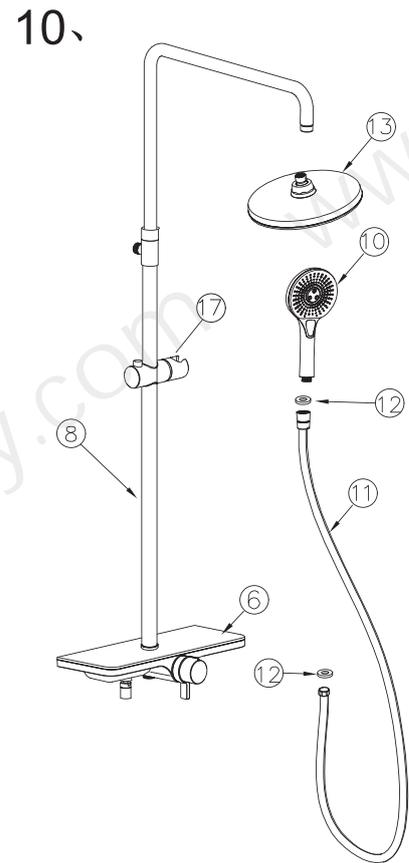
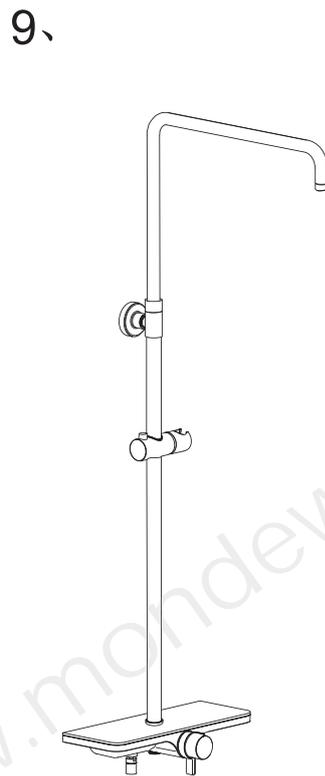


Item NO. :SF3030-S

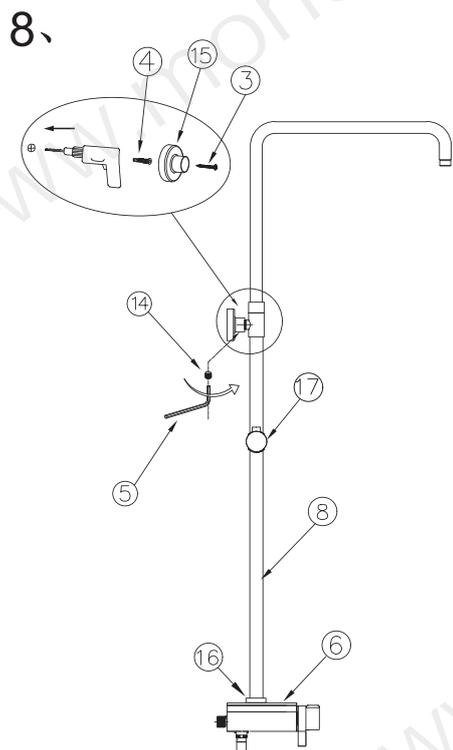

1. The distance of pipe center is 150mm.
2. Cleaning inner pipe
3. Wrap the thread seal tape (1) on water outlet joint (2), Screw the water outlet joint (2) to the hot/cold water inlet on the wall.
4. Keep balance of the joint (2) by use the leveling instrument (9)
5. Insert the mixer (6) into water outlet joint (2),
6. fix the mixer (6) by M5*6 screws (7) through Hexagon wrench (5)
7. Insert the shower column (8) into mixer (6), use the leveling instrument (9) to mark the proper location of mounting bracket (15).

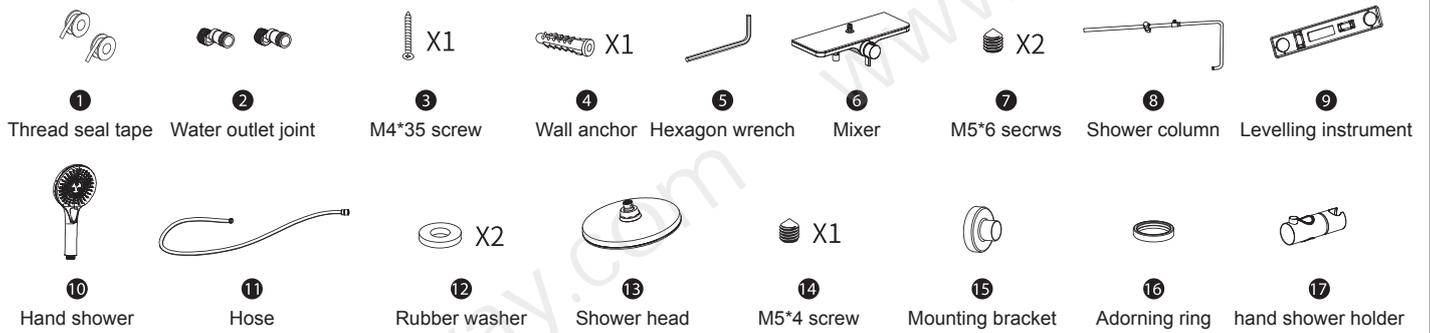

8. Take down the shower column (8), and drill a 6MM hole on the marked place. Put wall anchor (4) into the hole and fix the mounting bracket (15) on the wall with M4*35 screw (3). Insert the shower column (8) into the mixer (6) through the hand shower holder (17) and the decorative O-ring (16), then fix the shower column (8) with mounting bracket (15) by M5*4 screw (14) which are already in mounting bracket (15) with Hexagon wrench (5).

9. Picture showing

10. Screw the shower head (13) to the shower column (8), Place rubber washer (12) into each nut of hose (11), and secure one nut to the mixer (6), the other nut to the hand shower (10). Put the hand shower (10) onto the holder (17).